



Catch-All<sup>®</sup> & Xtreme Catch-All<sup>™</sup> with Hook/Loop Fastener System  
Catch-All<sup>®</sup> & Xtreme Catch-All<sup>™</sup> Rear Cargo Tray

For proper installation and best possible fit, please read all instructions BEFORE you begin.

For technical assistance or to obtain missing parts, please call Customer Service at 1-800-241-7219.


**Important Safety Information**

**⚠ WARNING**


To avoid serious personal injury or property damage:

- Be sure your floor-mats are properly installed and restrained with the fastener system.
- Unrestrained floor-mats can interfere with the foot controls of the vehicle.
- Be careful when entering and exiting the vehicle. The raised edge of the floor-mat can be a potential trip hazard.

**Contents**

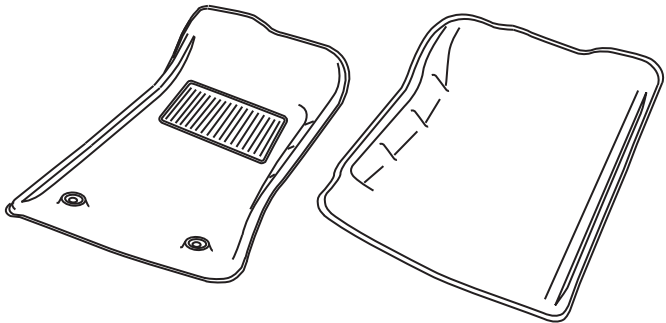


Floor Mats  
(Quantity/ Drawing May Vary)

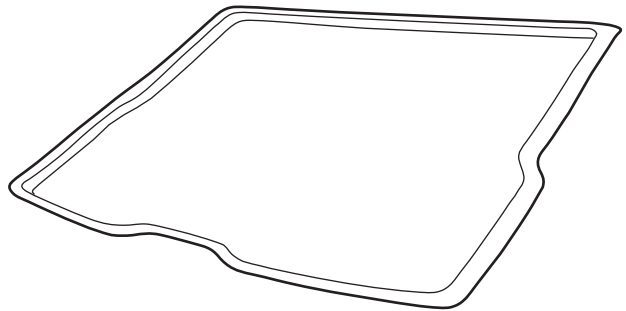


Cargo Mat

**Installation Steps, Cargo Mat**

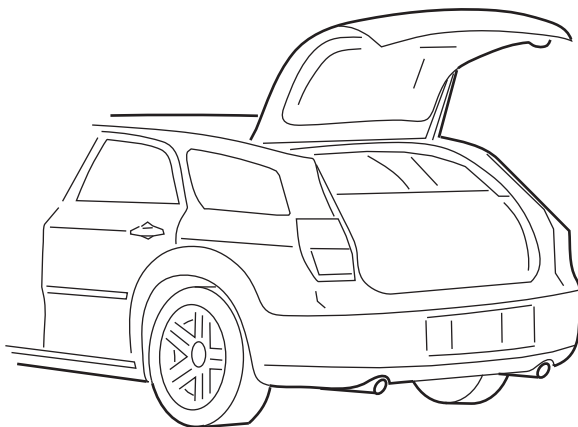


For cargo mats the hook/loop fastener system is not used. To install simply place the cargo mat in the cargo area of the vehicle.

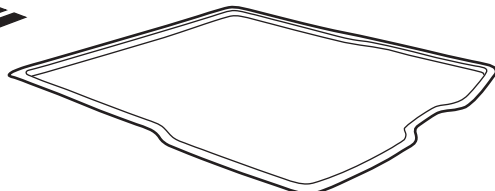


**Installation Steps, Floor Mats**

Illustration A

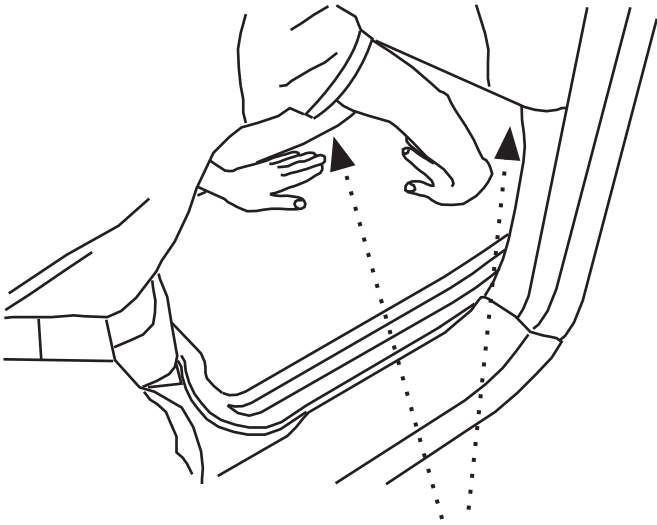

For Catch-All fronts: Align the part so that it is snug up against the center tunnel and front foot area.

Illustration B

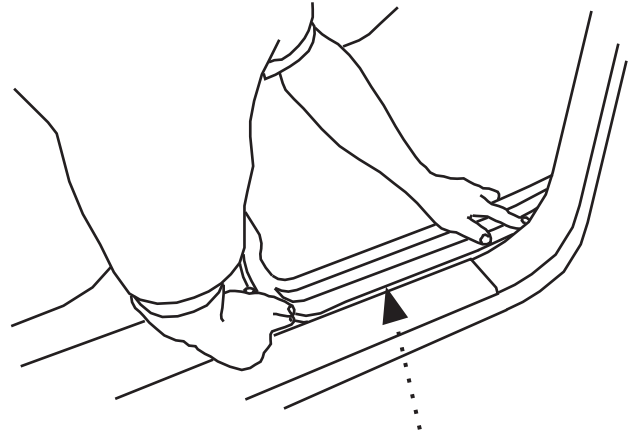

For Catch-All fronts: Make sure that the part is aligned evenly with the door sill.

**1**

Place the Catch-Alls in your vehicle and position for best fit (see illustrations "A" and "B").



**2**

Press floor mats into place, rubbing over areas with hook/loop pads. Driver side front mats attach to factory floor hooks.